



Niagara N4 legacy drivers 2022 (AX available)

Name	Points	Devices
Automated Logic WebCTRL for Jace 8000 / 250 points	250	Unlimited
Automated Logic WebCTRL for Jace 8000 / 1000 points	1000	Unlimited
Automated Logic WebCTRL for Jace 8000 / unlimited points	Unlimited	Unlimited
Automated Logic WebCTRL for Supervisor	500	Unlimited
Automated Logic WebCTRL for Supervisor / extra 500 points	500	Unlimited
Cylon Unitron for Jace 8000 / 250 points	250	Unlimited
Cylon Unitron for Jace 8000 / 1000 points	1000	Unlimited
Cylon Unitron for Jace 8000 / unlimited points	Unlimited	Unlimited
Cylon Unitron for Supervisor	500	Unlimited
Cylon Unitron for Supervisor / extra 500 points	500	Unlimited
Honeywell Panel Bus for Jace 8000 / 100 points	100	Unlimited
Honeywell Panel Bus for Jace 8000 / 250 points	250	Unlimited
Honeywell Panel Bus for Jace 8000 / 1000 points	1000	Unlimited
Honeywell Panel Bus for Jace 8000 / unlimited points	Unlimited	Unlimited
Satchwell Micronet for Jace 8000 / 250 points	250	Unlimited
Satchwell Micronet for Jace 8000 / 1000 points	1000	Unlimited
Satchwell Micronet for Jace 8000 / unlimited points	Unlimited	Unlimited
Satchwell Micronet for Supervisor	500	Unlimited
Satchwell Micronet for Supervisor / extra 500 points	500	Unlimited
Satchwell Satchnet for Jace 8000 / 250 points	250	Unlimited
Satchwell Satchnet for Jace 8000 / 1000 points	1000	Unlimited
Satchwell Satchnet for Jace 8000 / unlimited points	Unlimited	Unlimited
Satchwell Satchnet for Supervisor	500	Unlimited
Satchwell Satchnet for Supervisor / extra 500 points	500	Unlimited
Sauter EY-modulo2 / EY3600 for Jace 8000 / 250 points	250	Unlimited
Sauter EY-modulo2 / EY3600 for Jace 8000 / 1000 points	1000	Unlimited
Sauter EY-modulo2 / EY3600 for Jace 8000 / unlimited points	Unlimited	Unlimited
Sauter EY-modulo2 / EY3600 for Supervisor	500	Unlimited
Sauter EY-modulo2 / EY3600 for Supervisor / extra 500 points	500	Unlimited
Server/Client for Schneider EcoStruxure for Jace 8000 / 250 points	250	Unlimited
Server/Client for Schneider EcoStruxure for Jace 8000 / 1000 points	1000	Unlimited
Server/Client for Schneider EcoStruxure for Jace 8000 / unlimited points	Unlimited	Unlimited
Server/Client for Schneider EcoStruxure for Supervisor	500	Unlimited

Server/Client for Schneider EcoStruxure for Supervisor / extra 500 points	500	Unlimited
Schneider TAC Xenta for Jace 8000 / 250 points	250	Unlimited
Schneider TAC Xenta for Jace 8000 / 1000 points	1000	Unlimited
Schneider TAC Xenta for Jace 8000 / unlimited points	Unlimited	Unlimited
Schneider TAC Xenta for Supervisor	500	Unlimited
Schneider TAC Xenta for Supervisor / extra 500 points	500	Unlimited
Siemens Desigo PX for Jace 8000 / 250 points	250	Unlimited
Siemens Desigo PX for Jace 8000 / 1000 points	1000	Unlimited
Siemens Desigo PX for Jace 8000 / unlimited points	Unlimited	Unlimited
Siemens Desigo PX for Supervisor	500	Unlimited
Siemens Desigo PX for Supervisor / extra 500 points	500	Unlimited
Siemens Simatic S7 for Jace 8000 / 250 points	250	Unlimited
Siemens Simatic S7 for Jace 8000 / 1000 points	1000	Unlimited
Siemens Simatic S7 for Jace 8000 / unlimited points	Unlimited	Unlimited
Siemens Simatic S7 for Supervisor	500	Unlimited
Siemens Simatic S7 for Supervisor / extra 500 points	500	Unlimited
Trend IQ for Jace 8000 / 250 points	250	Unlimited
Trend IQ for Jace 8000 / 1000 points	1000	Unlimited
Trend IQ for Jace 8000 / unlimited points	Unlimited	Unlimited
Trend IQ for Supervisor	500	Unlimited
Trend IQ for Supervisor / extra 500 points	500	Unlimited
Amazon Alexa Skill for one device / zone	Unlimited	1
Amazon Alexa Skill for multiple devices / zones	Unlimited	Variable
Danfoss ADAP-KOOL for Jace 8000 / 5 devices	Unlimited	5
Danfoss ADAP-KOOL for Jace 8000 / 20 devices	Unlimited	20
Danfoss ADAP-KOOL for Jace 8000 / unlimited devices	Unlimited	Unlimited
Danfoss ADAP-KOOL for Supervisor	Unlimited	10
Danfoss ADAP-KOOL for Supervisor / extra 10 devices	Unlimited	10
Grundfos GENIbus for Jace 8000 / 5 devices	Unlimited	5
Grundfos GENIbus for Jace 8000 / 20 devices	Unlimited	20
Grundfos GENIbus for Jace 8000 / unlimited devices	Unlimited	Unlimited
Grundfos GENIbus for Supervisor	Unlimited	10
Grundfos GENIbus for Supervisor / extra 10 meters	Unlimited	10
IEC 62056-21 for Jace 8000 / 5 meters	Unlimited	5
IEC 62056-21 for Jace 8000 / 20 meters	Unlimited	20
IEC 62056-21 for Jace 8000 / unlimited meters	Unlimited	Unlimited
IEC 62056-21 for Supervisor	Unlimited	10
IEC 62056-21 for Supervisor / extra 10 meters	Unlimited	10
InfluxDB for Jace 8000	Unlimited	Unlimited
InfluxDB for Supervisor	Unlimited	Unlimited
ION Meter for Jace 8000 / 5 meters	Unlimited	5
ION Meter for Jace 8000 / 20 meters	Unlimited	20
ION Meter for Jace 8000 / unlimited meters	Unlimited	Unlimited
ION Meter for Supervisor	Unlimited	10
ION Meter for Supervisor / extra 10 meters	Unlimited	10
OCPD for Jace 8000 / 6 connectors	Unlimited	6
OCPD for Jace 8000 / 20 connectors	Unlimited	20
OCPD for Jace 8000 / unlimited connectors	Unlimited	Unlimited

OCPD for Supervisor	Unlimited	10
OCPD for Supervisor / extra 10 connectors	Unlimited	10
Rotronic for Jace 8000 / 5 sensors	Unlimited	5
Rotronic for Jace 8000 / 20 sensors	Unlimited	20
Rotronic for Jace 8000 / unlimited sensors	Unlimited	Unlimited
Rotronic for Supervisor	Unlimited	10
Rotronic for Supervisor / extra 10 sensors	Unlimited	10
SMI for Jace 8000 / 1 device (up to 16 motors)	Unlimited	1
SMI for Jace 8000 / 5 device (up to 80 motors)	Unlimited	5
SMI for Jace 8000 / unlimited device (unlimited motors)	Unlimited	Unlimited
Vaisala HMT140 for Jace 8000 / 5 sensors	Unlimited	5
Vaisala HMT140 for Jace 8000 / 20 sensors	Unlimited	20
Vaisala HMT140 for Jace 8000 / unlimited sensors	Unlimited	Unlimited
Vaisala HMT140 for Supervisor	Unlimited	10
Vaisala HMT140 for Supervisor / extra 10 sensors	Unlimited	10

Notes (for above drivers only!)

1. All drivers could be deployed on JACE and, often, on Supervisor. Licenses are bound to Host IDs, please provide them when ordering.
2. Drivers for building management system are licensed based on **the number of points**; devices are licensed based on **the number of devices**. OCPD driver is licensed based on **connectors** – EV charging plugs. EV chargers can have 1, 2 or more plugs each.
3. Drivers for JACE are licensed for a certain number of points or devices. For Supervisor please license and any number of extra licenses. E.g. to deploy Sauter driver on Supervisor with 1 one DR-N4-EY2-SUP and two DR-N4-EY2-SUP-500 licenses.
4. Standard Motor Interface (SMI) driver is licensed on device basis, where one device is one RS-485 unit (which supports up to 16 digital motors). If SMI RS-485 interfaces can be connected to one Jace port or divided between multiple ports.
5. All products are compatible with any OEM version of Niagara JACE: Vykon JACE, Honeywell TONN, JCI FX, Distech Controls EC-Net, GC5 etc.
6. Licenses and prices for legacy Niagara AX and JACEs are available on request.
7. No returns accepted after the license code has been issued. License transfer is only allowed in case of failure providing manufacturer confirmation letter with RMA number.
8. Niagara instance shall be licensed for the total number of points and devices (including drivers and third-party ones) by Tridium.
9. Minimum order for the bank transfer purchase is 200 EUR.

Niagara AX drivers are available on request. **PLEASE CHANGE PART NUMBER FROM N4 TO N4T** as they differ from N4 driver prices! **For drivers below**

Allen Bradley CSPV4 Driver for Jace 3 or 500 points limit JACE 8000	Allen Bradley CSPV4 TCP Driver
Allen Bradley CSPV4 Driver for Jace 6 or 1000 points limit JACE 8000	Allen Bradley CSPV4 TCP Driver
Allen Bradley CSPV4 Driver for Jace 7 or 2000 points limit JACE 8000	Allen Bradley CSPV4 TCP Driver
Allen Bradley CSPV4 Driver for Jace 8000 unlimited points.	Allen Bradley CSPV4 TCP Driver
Allen Bradley CSPV4 Driver for WS	Allen Bradley CSPV4 TCP Driver.
Allen Bradley CIP Driver for Jace 3 or 500 points limit JACE 8000	Allen Bradley CIP Driver
Allen Bradley CIP Driver for Jace 6 or 1000 points limit JACE 8000	Allen Bradley CIP Driver
Allen Bradley CIP Driver for Jace 7 or 2000 points limit JACE 8000	Allen Bradley CIP Driver
Allen Bradley CIP Driver for Jace 8000 unlimited points.	Allen Bradley CIP Driver
Allen Bradley CIP Driver for WS	Allen Bradley CIP TCP Driver. Work
ASI Driver for Jace 3 or 500 points limit JACE 8000	ASI Controller's Driver, Supported

ASI Driver for Jace 6 or 1000 points limit JACE 8000	ASI Controller's Driver, Supported
ASI Driver for Jace 7 or 2000 points limit JACE 8000	ASI Controller's Driver, Supported
ASI Driver for Jace 8000 unlimited points.	ASI Controller's Driver, Supported
Barber Colman ASD Driver for Jace 3 or 500 points limit JACE 8000	Barber Colman ASD driver for PEM, MZII, MNASDi and etc. Features
Barber Colman ASD Driver for Jace 6 or 1000 points limit JACE 8000	Barber Colman ASD driver for PEM, MZII, MNASDi and etc. Features
Barber Colman ASD Driver for Jace 7 or 2000 points limit JACE 8000	Barber Colman ASD driver for PEM, MZII, MNASDi and etc. Features
Barber Colman ASD Driver for Jace 8000 unlimited points.	Barber Colman ASD driver for PEM,
Barber Colman GCM Driver for Jace 3 or 500 points limit JACE 8000	Barber Colman GCM Driver. Able to perform Serial Tunneling.
Barber Colman GCM Driver for Jace 6 or 1000 points limit JACE 8000	Barber Colman GCM Driver. Able to perform Serial Tunneling.
Barber Colman GCM Driver for Jace 7 or 2000 points limit JACE 8000	Barber Colman GCM Driver. Able to perform Serial Tunneling.
Barber Colman GCM Driver for Jace 8000 unlimited points.	Barber Colman GCM Driver. Able to
Clipsal Cgate TCP Driver for Jace 3 or 500 points limit JACE 8000	Clipsal (now Schneider) Cgate TCP
Clipsal Cgate TCP Driver for Jace 6 or 1000 points limit JACE 8000	Clipsal (now Schneider) Cgate TCP
Clipsal Cgate TCP Driver for Jace 7 or 2000 points limit JACE 8000	Clipsal (now Schneider) Cgate TCP
Clipsal Cgate TCP Driver for Jace 8000 unlimited points.	Clipsal (now Schneider) Cgate TCP
Clipsal Cgate TCP Driver for N4 Supervisor	Clipsal (now Schneider) Cgate TCP
Clipsal Cbus Driver for Jace 3 or 500 points limit JACE 8000	Clipsal (now Schneider) Cbus driver,
Clipsal Cbus Driver for Jace 6 or 1000 points limit JACE 8000	Clipsal (now Schneider) Cbus driver,
Clipsal Cbus Driver for Jace 7 or 2000 points limit JACE 8000	Clipsal (now Schneider) Cbus driver,
Clipsal Cbus Driver for Jace 8000 unlimited points.	Clipsal (now Schneider) Cbus driver,
Clipsal Cbus Driver for N4 Supervisor.	Clipsal (now Schneider) Cbus driver,
Clipsal Cbus Driver for N4 Supervisor. Additional 500 points block.	Additional 500 points for Clipsal (now Schneider) Cbus driver for AX
CSI Inet for Jace 3 or 500 points limit JACE 8000	N4 Driver to connect to Legacy CSI
CSI Inet for Jace 6 or 1000 points limit JACE 8000	N4 Driver to connect to Legacy CSI
CSI Inet for Jace 7 or 2000 points limit JACE 8000	N4 Driver to connect to Legacy CSI
CSI Inet for Jace 8000 unlimited points.	AX Driver to connect to Legacy CSI
Honeywell Cbus TCP Driver for Jace 3 or 500 points limit JACE 8000	Honeywell Cbus TCP Driver. The driver needs 1x Gateway for each
Honeywell Cbus TCP Driver for Jace 6 or 1000 points limit JACE 8000	Honeywell Cbus TCP Driver. The driver needs 1x Gateway for each
Honeywell Cbus TCP Driver for Jace 7 or 2000 points limit JACE 8000	Honeywell Cbus TCP Driver. The driver needs 1x Gateway for each
Honeywell Cbus TCP Driver for Jace 8000 unlimited points.	Honeywell Cbus TCP Driver. The
Honeywell Cbus TCP Driver for N4 Supervisor	N4 Supervisor Cbus TCP Driver, includes license for 500 Cbus RS485
Honeywell Cbus TCP Driver for N4 Supervisor, additional 500 point block	Additional 500 point block for N4 Supervisor Cbus TCP Driver
Innotech driver for Jace 3 or 500 points limit JACE 8000	Innotech driver. With Learn and
Innotech driver for Jace 6 or 1000 points limit JACE 8000	Innotech driver. With Learn and
Innotech driver for Jace 7 or 2000 points limit JACE 8000	Innotech driver. With Learn and
Innotech driver for Jace 8000 unlimited points.	Innotech driver. With Learn and
Johnson N2 Open driver for Jace 3 or 500 points limit JACE 8000	Johnson N2 Open driver. With Learn
Johnson N2 Open driver for Jace 6 or 1000 points limit JACE 8000	Johnson N2 Open driver. With Learn

Johnson N2 Open driver for Jace 7 or 2000 points limit JACE 8000	Johnson N2 Open driver. With Learn
Johnson N2 Open driver for Jace 8000 unlimited points.	Johnson N2 Open driver. With Learn
Johnson N2 Slave TCP Driver for Jace 3 or 500 points limit JACE 8000	Johnson N2 Slave TCP Driver. Able to convert JACE to become part of
Johnson N2 Slave TCP Driver for Jace 6 or 1000 points limit JACE 8000	Johnson N2 Slave TCP Driver. Able to convert JACE to become part of
Johnson N2 Slave TCP Driver for Jace 7 or 2000 points limit JACE 8000	Johnson N2 Slave TCP Driver. Able to convert JACE to become part of
Johnson N2 Slave TCP Driver for Jace 8000 unlimited points.	Johnson N2 Slave TCP Driver. Able to
Modbus RTU/TCP Driver for JACE 3,6,7,8	Modbus driver for JACE 3,6,7 and 8.
Modbus TCP Driver for N4 Supervisor	Modbus TCP driver for N4
Modbus TCP Driver for N4 Supervisor -addon 500 pts	Additional 500 point block for N4 Supervisor Modbus TCP Driver.
Modbus TCP Driver for N4 Supervisor with unlimited points count.	Modbus TCP driver for N4 Supervisor. Unlimited Points count.
Novar Driver for Jace 3 or 500 points limit JACE 8000.	Novar RS232 Driver. Works with
Novar Driver for Jace 6 or 1000 points limit JACE 8000.	Novar RS232 Driver. Works with
Novar Driver for for Jace 7 or 2000 points limit JACE 8000.	Novar RS232 Driver. Works with
Novar Driver for Jace 8000 unlimited points.	Novar RS232 Driver. Works with
Novar TCP Driver for Jace 3 or 500 points limit JACE 8000.	Novar TCP Driver. Works with Lingo XE.
Novar TCP Driver for Jace 6 or 1000 points limit JACE 8000.	Novar TCP Driver. Works with Lingo XE.
Novar TCP Driver for for Jace 7 or 2000 points limit JACE 8000.	Novar TCP Driver. Works with Lingo XE.
Novar TCP Driver for Jace 8000 unlimited points.	Novar TCP Driver. Works with Lingo XE.
Omron Fins driver for Jace 3 or 500 points limit JACE 8000	Omron Fins driver. Support Fins CV
Omron Fins driver for Jace 6 or 1000 points limit JACE 8000	Omron Fins driver. Support Fins CV
Omron Fins driver for Jace 7 or 2000 points limit JACE 8000	Omron Fins driver. Support Fins CV
Omron Fins driver for Jace 8000 unlimited points.	Omron Fins driver. Support Fins CV
OPC DA Server Driver for N4 Supervisor	OPC Server driver, Exporting all
OPC DA Server Driver for N4 Supervisor, additional 500 point block	Additional 500 point block for OPC Server Driver.
Robertshaw Microsmart TCP Driver for Jace 3 or 500 points limit JACE 8000	Robertshaw Microsmart driver. For Version 9.4C and above. With Learn
Robertshaw Microsmart TCP Driver for Jace 6 or 1000 points limit JACE 8000	Robertshaw Microsmart driver. For Version 9.4C and above. With Learn
Robertshaw Microsmart TCP Driver for Jace 7 or 2000 points limit JACE 8000	Robertshaw Microsmart driver. For Version 9.4C and above. With Learn
Robertshaw Microsmart TCP Driver for Jace 8000 unlimited points.	Robertshaw Microsmart driver. For Version 9.4C and above. With Learn
Robertshaw Microsmart TCP Driver for N4 Supervisor	N4 Supervisor Microsmart TCP
Robertshaw Microsmart TCP Driver for AX Supervisor, additional 500 point block	Additional 500 point block for N4 Supervisor Microsmart TCP Driver
Robertshaw DMS Driver for Jace 3 or 500 points limit JACE 8000	Robertshaw DMS Driver. Required
Robertshaw DMS Driver for Jace 6 or 1000 points limit JACE 8000	Robertshaw DMS Driver. Required
Robertshaw DMS Driver for Jace 7 or 2000 points limit JACE 8000	Robertshaw DMS Driver. Required
Robertshaw DMS Driver for Jace 8000 unlimited points.	Robertshaw DMS Driver. Required
Siemens P1 DC4 Driver for Jace 3 or 500 points limit JACE 8000	Siemens P1 DC4 Driver. Connects

Siemens P1 DC4 Driver for Jace 6 or 1000 points limit JACE 8000	Siemens P1 DC4 Driver. Connects
Siemens P1 DC4 Driverfor Jace 7 or 2000 points limit JACE 8000	Siemens P1 DC4 Driver. Connects
Siemens P1 DC4 Driver for Jace 8000 unlimited points.	Siemens P1 DC4 Driver. Required to
Siemens Apogee 600 TEC UC Driver for Jace 3 or 500 points limit JACE 8000	Siemens Apogee 600 P1/FLN/TEC/UC Driver. Connects
Siemens Apogee 600 TEC UC Driver for Jace 6 or 1000 points limit JACE 8000	Siemens Apogee 600 P1/FLN/TEC/UC Driver. Connects
Siemens Apogee 600 TEC UC Driver for Jace 7 or 2000 points limit JACE 8000	Siemens Apogee 600 P1/FLN/TEC/UC Driver. Connects
Siemens Apogee 600 TEC UC Driver for Jace 8000 unlimited points.	Siemens Apogee 600 P1/FLN/TEC/UC Driver. Connects
SMS Driver for N4 Supervisor and JACE 3,6,7,8	SMS Driver that support Multigroup
Steafa Smart 2 Driver for Jace 3 or 500 points limit JACE 8000	Steafa Smart 2 Driver, AETI-485
Steafa Smart 2 Driver for Jace 6 or 1000 points limit JACE 8000	Steafa Smart 2 Driver, AETI-485
Steafa Smart 2 Driver Jace 7 or 2000 points limit JACE 8000	Steafa Smart 2 Driver, AETI-485
Steafa Smart 2 Driver for Jace 8000 unlimited points.	Steafa Smart 2 Driver, AETI-485
TAP Pager Driver for Jace 3 or 500 points limit JACE 8000	TAP (Telocator Alphanumeric
TAP Pager Driver for Jace 6 or 1000 points limit JACE 8000	TAP (Telocator Alphanumeric
TAP Pager Driver Jace 7 or 2000 points limit JACE 8000	TAP (Telocator Alphanumeric
TAP Pager Driver for Jace 8000 unlimited points.	TAP (Telocator Alphanumeric
TAP Pager Driver for AX Supervisor come with 500 points.	TAP (Telocator Alphanumeric
TAP Pager Driver for AX Supervisor. Additional 500 points add on.	TAP (Telocator Alphanumeric Protocol) RS232 Driver. Additional
TAP Pager Driver for AX Supervisor come with unlimited points count.	TAP (Telocator Alphanumeric Protocol) RS232 Driver. For TAP
TCOM Driver for JACE 3,6,7,8	TCOM driver allowing for Niagara
TCOM Driver for N4 Supervisor	TCOM driver allowing for Niagara
TCOM Driver for N4 Supervisor -500 pts	Additional 500 point block for N4 Supervisor TCOM Driver
TCOM Driver for N4 Supervisor Unlimited Point Count	TCOM driver allowing for Niagara communication to EasyIO, enables
TCOMAX driver for N4 Supervisor	TCOMAX driver allowing Niagara N4 Supervisor communication with
TCOMAX Driver for N4 Supervisor -500 pts	Additional 500 point block for N4 Supervisor TCOMAX Driver
TCOMAX Driver for AX Supervisor Unlimited Point Count	TCOMAX driver allowing Niagara N4 Supervisor communication with
Telegram Alarm Messaging Driver for N4 Supervisor and JACE 7,8	Alarm Messaging Driver. Need internet connections.
Trane Comm3 Non Isolated Driver for Jace 3 or 500 points limit JACE 8000	Trane Comm3 Non Isolated driver for VAV Type 1.
Trane Comm3 Non Isolated Driver for Jace 6 or 1000 points limit JACE 8000	Trane Comm3 Non Isolated driver for VAV Type 1.
Trane Comm3 Non Isolated Driver for Jace 7 or 2000 points limit JACE 8000	Trane Comm3 Non Isolated driver for VAV Type 1.
Trane Comm3 Non Isolated Driver for Jace 8000 unlimited points.	Trane Comm3 Non Isolated driver for VAV Type 1.
Trane Comm4 Driver for Jace 3 or 500 points limit JACE 8000	Trane Comm4 driver
Trane Comm4 Driver for Jace 6 or 1000 points limit JACE 8000	Trane Comm4 driver
Trane Comm4 Driver for Jace 7 or 2000 points limit JACE 8000	Trane Comm4 driver
Trane Comm4 Driver for Jace 8000 unlimited points.	Trane Comm4 driver.

Trend IQ2 Serial Driver for Jace 3 or 500 points limit JACE 8000	Trend IQ2 Serial Driver. Able to
Trend IQ2 Serial Driver for Jace 6 or 1000 points limit JACE 8000	Trend IQ2 Serial Driver. Able to
Trend IQ2 Serial Driver for Jace 7 or 2000 points limit JACE 8000	Trend IQ2 Serial Driver. Able to
Trend IQ2 Serial Driver for Jace 8000 unlimited points.	Trend IQ2 Serial Driver. Able to
Trend IQ3 TCP Driver for Jace 3 or 500 points limit JACE 8000	Trend IQ3 TCP Driver. Able to learn
Trend IQ3 TCP Driver for Jace 6 or 1000 points limit JACE 8000	Trend IQ3 TCP Driver. Able to learn
Trend IQ3 TCP Driver for Jace 7 or 2000 points limit JACE 8000	Trend IQ3 TCP Driver. Able to learn
Trend IQ3 TCP Driver for Jace 8000 unlimited points.	Trend IQ3 TCP Driver. Able to learn
Trend IQ3 TCP Driver for N4 Supervisor	N4 Supervisor Trend IQ3 Driver,
Trend IQ3 TCP Driver for N4 Supervisor, additional 500 point block	Additional 500 point block for N4 Supervisor Trend IQ3 Driver
Trend IQ3 TCP Driver for N4 Supervisor Unlimited Points count	N4 Supervisor Trend IQ3 Driver, unlimited points count. Able to learn
MIG Microsmart Gateway	RS485 to TCP Gateway for
MIG CBUS Gateway	RS485 to TCP Gateway for CBUS TCP
MIG N2Slave Gateway	RS485 to TCP Gateway for N2 Slave
MIG DC4 Gateway	RS485 to TCP Gateway for Siemens
MIG Modbus Bridge	Modbus RTU to TCP drivers. Convert
MIG RS232 Gateway	RS232 to TCP Gateway. Comes with
Navigate GSM/3G Modul	Work with SMS driver. Support
UTEK RS485 Repeater	UTEK Industrial RS485 Repeater with
USR-TCP232 TCP Gateway.	Convert RS232 to TCP. With Server

Part Number

ALC-J8-250
ALC-J8-1000
ALC-J8-UNL
ALC-SUP
ALC-SUP-500
CYL-J8-250
CYL-J8-1000
CYL-J8-UNL
CYL-SUP
CYL-SUP-500
PNL-J8-100
PNL-J8-250
PNL-J8-1000
PNL-J8-UNL
MNT-J8-250
MNT-J8-1000
MNT-J8-UNL
MNT-SUP
MNT-SUP-500
STN-J8-250
STN-J8-1000
STN-J8-UNL
STN-SUP
STN-SUP-500
EY2-J8-250
EY2-J8-1000
EY2-J8-UNL
EY2-SUP
EY2-SUP-500
EWS-J8-250
EWS-J8-1000
EWS-J8-UNL
EWS-SUP

EWS-SUP-500
TAC-J8-250
TAC-J8-1000
TAC-J8-UNL
TAC-SUP
TAC-SUP-500
DPX-J8-250
DPX-J8-1000
DPX-J8-UNL
DPX-SUP
DPX-SUP-500
SS7-J8-05
SS7-J8-20
SS7-J8-UNL
SS7-SUP
SS7-SUP-10
TND-J8-250
TND-J8-1000
TND-J8-UNL
TND-SUP
TND-SUP-500
ALX-PRS
ALX-CST
DAK-J8-05
DAK-J8-20
DAK-J8-UNL
DAK-SUP
DAK-SUP-10
GNB-J8-05
GNB-J8-20
GNB-J8-UNL
GNB-SUP
GNB-SUP-10
IEC-J8-05
IEC-J8-20
IEC-J8-UNL
IEC-SUP
IEC-SUP-10
INF-J8-UNL
INF-SUP-UNL
ION-J8-05
ION-J8-20
ION-J8-UNL
ION-SUP
ION-SUP-10
OCP-J8-06
OCP-J8-20
OCP-J8-UNL

OCP-SUP
OCP-SUP-10
RTR-J8-05
RTR-J8-20
RTR-J8-UNL
RTR-SUP
RTR-SUP-10
SMI-J8-01
SMI-J8-05
SMI-J8-UNL
VSL-J8-05
VSL-J8-20
VSL-J8-UNL
VSL-SUP
VSL-SUP-10

o JACE or Supervisor

rivers for smart
the number of

lease order one main
 l 500 points, order


ne Vestamatic IF SMI
 nected to one RS-

ywell Hawk, Trend

owed in case of host

both built-in Niagara

AX. Prices may



DR-ML-CSPV4-N4-J3
DR-ML-CSPV4-N4-J6
DR-ML-CSPV4-N4-J7
DR-ML-CSPV4-N4-J8
DR-ML-CSPV4-N4-WS
DR-ML-CIP-N4-J3
DR-ML-CIP-N4-J6
DR-ML-CIP-N4-J7
DR-ML-CIP-N4-J8
DR-ML-CIP-N4-WS
DR-ML-ASI-N4-J3

DR-ML-ASI-N4-J6
DR-ML-ASI-N4-J7
DR-ML-ASI-N4-J8
DR-ML-ASD-N4-J3
DR-ML-ASD-N4-J6
DR-ML-ASD-N4-J7
DR-ML-ASD-N4-J8
DR-ML-GCM-N4-J3
DR-ML-GCM-N4-J6
DR-ML-GCM-N4-J7
DR-ML-GCM-N4-J8
DR-ML-CGATE-N4-J3
DR-ML-CGATE-N4-J6
DR-ML-CGATE-N4-J7
DR-ML-CGATE-N4-J8
DR-ML-CGATE-N4-WS
DR-ML-CLCBUS-N4-J3
DR-ML-CLCBUS-N4-J6
DR-ML-CLCBUS-N4-J7
DR-ML-CLCBUS-N4-J8
DR-ML-CLCBUS-N4-WS
DR-ML-CLCBUS-N4-WS-500
DR-ML-INET-N4-J3
DR-ML-INET-N4-J6
DR-ML-INET-N4-J7
DR-ML-INET-N4-J8
DR-ML-CBUSTCP-N4-J3
DR-ML-CBUSTCP-N4-J6
DR-ML-CBUSTCP-N4-J7
DR-ML-CBUSTCP-N4-J8
DR-ML-CBUSTCP-N4-WS
DR-ML-CBUSTCP-N4-500
DR-ML-INNO-N4-J3
DR-ML-INNO-N4-J6
DR-ML-INNO-N4-J7
DR-ML-INNO-N4-J8
DR-ML-N2-N4-J3
DR-ML-N2-N4-J6

DR-ML-N2-N4-J7
DR-ML-N2-N4-J8
DR-ML-N2SivTCP-N4-J3
DR-ML-N2SivTCP-N4-J6
DR-ML-N2SivTCP-N4-J7
DR-ML-N2SivTCP-N4-J8
DR-ML-MDBS- J-N4
DR-ML-MDBS-SUP-N4
DR-ML-MDBS-SUP-N4-500
DR-ML-MDBS-SUP-N4-UL
DR-ML-Novar-N4-J3
DR-ML-Novar-N4-J6
DR-ML-Novar-N4-J7
DR-ML-Novar-N4-J8
DR-ML-NovarTCP-N4-J3
DR-ML-NovarTCP-N4-J6
DR-ML-NovarTCP-N4-J7
DR-ML-NovarTCP-N4-J8
DR-ML-OMRON-N4-J3
DR-ML-OMRON-N4-J6
DR-ML-OMRON-N4-J7
DR-ML-OMRON-N4-J8
DR-ML-OPC-SR-N4
DR-ML-OPC-SR-N4-500
DR-ML-MSTCP-N4-J3
DR-ML-MSTCP-N4-J6
DR-ML-MSTCP-N4-J7
DR-ML-MSTCP-N4-J8
DR-ML-MSTCP-N4-WS
DR-ML-MSTCP-N4-500
DR-ML-DMS-N4-J3
DR-ML-DMS-N4-J6
DR-ML-DMS-N4-J7
DR-ML-DMS-N4-J8
DR-ML-DC4-N4-J3

DR-ML-DC4-N4-J6
DR-ML-DC4-N4-J7
DR-ML-DC4-N4-J8
DR-ML-TEC-N4-J3
DR-ML-TEC-N4-J6
DR-ML-TEC-N4-J7
DR-ML-TEC-N4-J8
DR-ML-SMS-N4
DR-ML-SM2-N4-J3
DR-ML-SM2-N4-J6
DR-ML-SM2-N4-J7
DR-ML-SM2-N4-J8
DR-ML-Tap-N4-J3
DR-ML-Tap-N4-J6
DR-ML-Tap-N4-J7
DR-ML-Tap-N4-J8
DR-ML-TAP-AX-WS
DR-ML-TAP-AX-WS-500
DR-ML-TAP-AX-WS-UL
DR-ML-TCOM- J-N4
DR-ML-TCOM-SUP-N4
DR-ML-TCOM-SUP-N4-500
DR-ML-TCOM-SUP-N4-UL
DR-ML-TCOMAX-SUP-N4
DR-ML-TCOMAX-SUP-N4-500
DR-ML-TCOMAX-SUP-N4-UL
DR-ML-TGRAM-N4
DR-ML-NICom3-N4-J3
DR-ML-NICom3-N4-J6
DR-ML-NICom3-N4-J7
DR-ML-NICom3-N4-J8
DR-ML-TComm4-N4-J3
DR-ML-TComm4-N4-J6
DR-ML-TComm4-N4-J7
DR-ML-TComm4-N4-J8

DR-ML-IQ-N4-J3
DR-ML-IQ-N4-J6
DR-ML-IQ-N4-J7
DR-ML-IQ-N4-J8
DR-ML-IQTCP-N4-J3
DR-ML-IQTCP-N4-J6
DR-ML-IQTCP-N4-J7
DR-ML-IQTCP-N4-J8
DR-ML-IQTCP-N4-WS
DR-ML-IQTCP-N4-500
DR-ML-IQTCP-N4-WS- UL
MIG-112-Microsmart
MIG-112-CBUS
MIG-112-N2Slave
MIG-112-DC4
MIG-112-ModbusBridge
MIG-112-RS232
Navigate-NR500-S3G-500
UT-2209
USR-TCP232